



FIG 1: 55 Engine Unit Explosive Picture

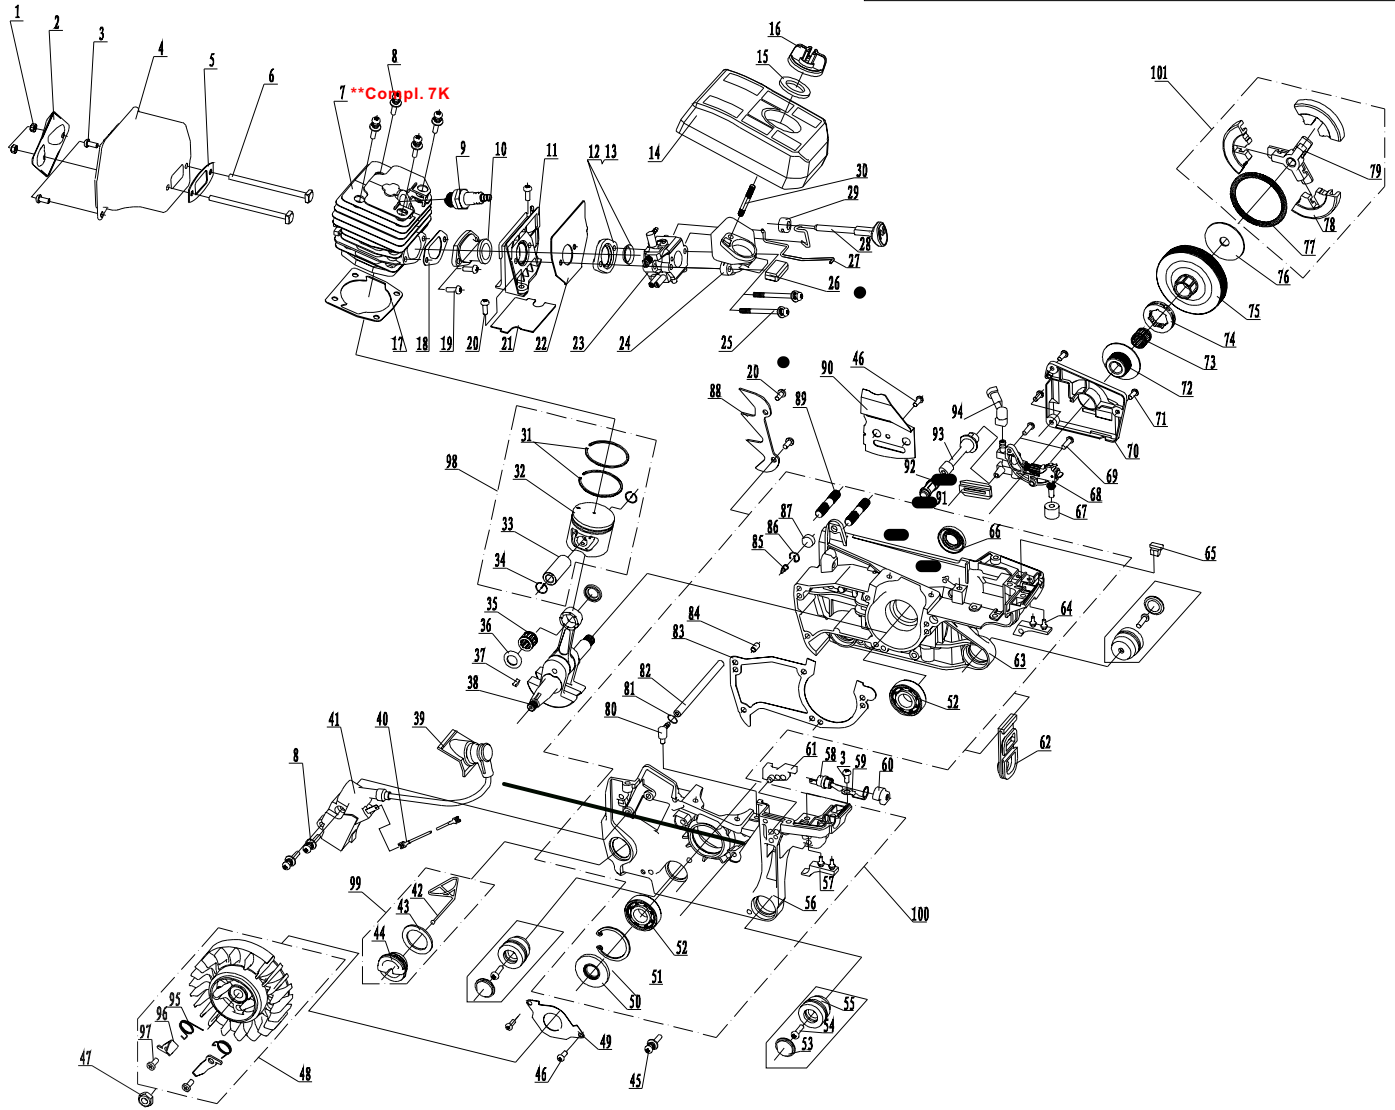

Ser.NO.	Code	Part Name	Qty	Ser.NO.	Code	Part Name	Qty	Ser.NO.	Code	Part Name	Qty	Ser.NO.	Code	Part Name	Qty
1-1	1755101	Nut M5	2	1-26	1755126	Supporter	1	1-51	1755151	Ring Φ 35	1	1-76	1755176	Plate	1
1-2	1755102	Cover	1	1-27	1755127	Throttle rod	1	1-52	1755152	Bearing 6202	2	1-77	1755177	Spring (clutch)	1
1-3	1755103	Screw M5x10	3	1-28	1755128	Choke rod	1	1-53	1755153	Cap	2	1-78	1755178	Clutch wedge	3
1-4	1755104	Muffler	1	1-29	1755129	Grommet(Choke)	1	1-54	1755154	Screw ST4.8x14	9	1-79	1755179	Retainer	1
1-5	1755105	Gasket (muffler)	1	1-30	1755130	Bolt	1	1-55	1755155	Damper	3	1-80	1755180	Vacuum joint	1
1-6	1755106	Bolt(muffler)M5x83	2	1-31	1755131	Piston ring	2	1-56	1755156	Left crankcase	1	1-81	1755181	Ring	1
1-7	1755107	Cylinder	1	1-32	1755132	Piston	1	1-57	1755157	Stopper	1	1-82	1755182	Vacuum pipe	1
1-7k	1755107k	Cylinder block assy (including piston assy)	1	1-33	1755133	Piston ping	2	1-58	1755158	Switch	1	1-83	1755183	Gasket (crankcase)	1
1-8	1755108	Bolt(cylinder)M5x20	6	1-34	1755134	Snap ring	1	1-59	1755159	Plate	1	1-84	1755184	Pin	3
1-9	1755109	Spark plug	1	1-35	1755135	Needle bearing	2	1-60	1755160	Danper	1	1-85	1755185	Vacuum valve	1
1-10	1755110	Inlet pipe	1	1-36	1755136	Washer	1	1-61	1755161	Guide(LH)	1	1-86	1755186	Ring	1
1-11	1755111	Bracket	1	1-37	1755137	Key	1	1-62	1755162	Grommet(throttle)	1	1-87	1755187	Seal	1
1-12	1755112	Spacer	1	1-38	1755138	Crankshaft	1	1-63	1755163	Right crankcase	1	1-88	1755188	Bumper	1
1-13	1755113	Inner guide	1	1-39	1755139	Grommet	1	1-64	1755164	Stopper	1	1-89	1755189	Stud	2
1-14	1755114	Air cleaner comp	1	1-40	1755140	Cord	1	1-65	1755165	Guide(LH)	1	1-90	1755190	Plate	1
1-15	1755115	Gasket	1	1-41	1755141	Ignior comp	1	1-66	1755166	Oil seal	1	1-91	1755191	Guide	1
1-16	1755116	Knob	1	1-42	1755142	Retainer	2	1-67	1755167	Seal	1	1-92	1755192	Oil filter	1
1-17	1755117	Gasket(cylinder)	1	1-43	1755143	Gasket(oil)	1	1-68	1755168	Oil pump	1	1-93	1755193	Oil pipe	1
1-18	1755118	Gasket(inlet pipe)	1	1-44	1755144	Oil cap	1	1-69	1755169	Screw M4x14	2	1-94	1755194	Pipe	1
1-19	1755119	Screw M5x12	2	1-45	1755145	Screw M5x30	5	1-70	1755170	Pump cover	1	1-95	1755195	Spring	2
1-20	1755120	Screw M5x14	16	1-46	1755146	Screw M4x6	3	1-71	1755171	Screw M4x10	3	1-96	1755196	Pawl	2
1-21	1755121	Mat	1	1-47	1755147	Nut M8x1	1	1-72	1755172	Worm	1	1-97	1755197	Screw	2
1-22	1755122	Gasket	1	1-48	1755148	Flywheel	1	1-73	1755173	Needle bearing	1	1-98	1755198	Piston assy	1
1-23	1755123	Carburetor	1	1-49	1755149	Plate	1	1-74	1755174	Rim	1	1-99	1755199	Oil tank cover assy	1
1-24	1755124	Manifold	1	1-50	1755150	Oil seal	1	1-75	1755175	Clutch drum	1	1-100	17551100	Crank case assy	1
1-25	1755125	Screw M5x50	2									1-101	17551101	Clutch assy	1

FIG 2:55 Cover Unit Explosive Picture

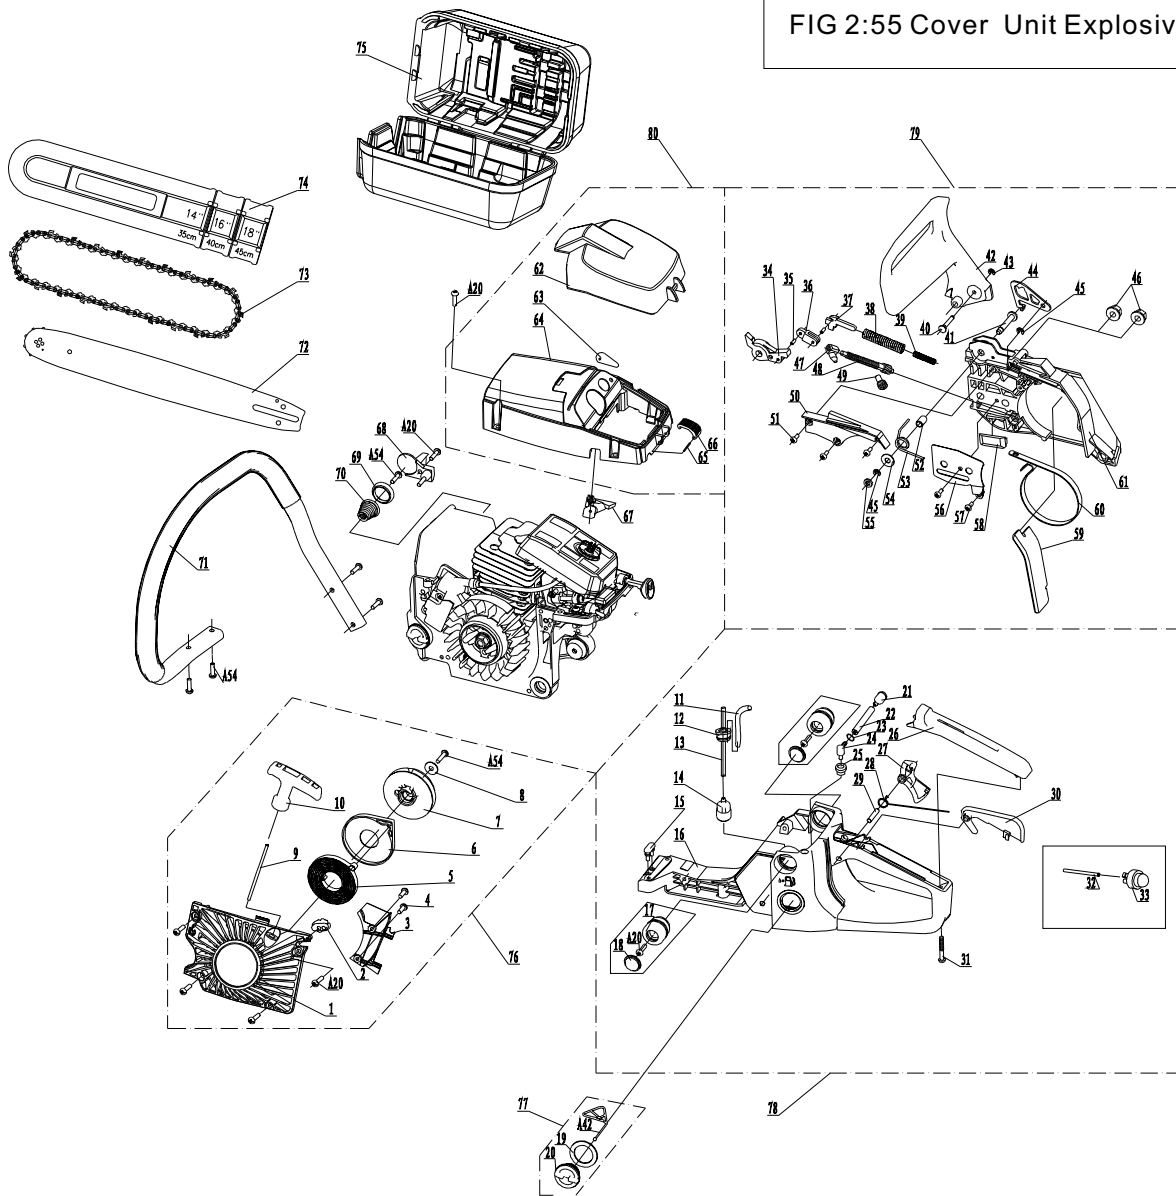

Ser.NO.	Code	Part Name	Qty	Ser.NO.	Code	Part Name	Qty	Ser.NO.	Code	Part Name	Qty
2-01	1755201	Starter cover	1	2-27	1755227	Throttle lever	1	2-54	1755254	Washer	1
2-02	1755202	LH guide	1	2-28	1755228	Throttle spring	1	2-55	1755255	Spacer	1
2-03	1755203	Cover	1	2-29	1755229	Ping 6x25	1	2-56	1755256	Plate	1
2-04	1755204	Screw ST3.5x8	2	2-30	1755230	Arm	1	2-57	1755257	Screw ST4.2x8	2
2-05	1755205	Spring	1	2-31	1755231	Screw ST4.8x16	1	2-58	1755258	Guide	1
2-06	1755206	Spring cover	1	2-32	1755232	Pipe	1	2-59	1755259	Protector	1
2-07	1755207	Starter wheel	1	2-33	1755233	Fuel pump	1	2-60	1755260	Brake band	1
2-08	1755208	Washer	1	2-34	1755234	Brake lever	1	2-61	1755261	Chain cover	2
2-09	1755209	Ripe	1	2-35	1755235	Pin 3x9	2	2-62	1755262	Cleaner cover	1
2-10	1755210	Starter hander	1	2-36	1755236	Brake lever	1	2-63	1755263	Plate	1
2-11	1755211	Pipe	1	2-37	1755237	Slide arm	1	2-64	1755264	Upper cover	1
2-12	1755212	Pipe seat	1	2-38	1755238	Brake spring	1	2-65	1755265	Pin 3x25	1
2-13	1755213	Fuel pipe	1	2-39	1755239	Return spring	1	2-66	1755266	Knob	1
2-14	1755214	Fuel filter	1	2-40	1755240	Pin	1	2-67	1755267	Guide	1
2-15	1755215	Damper	1	2-41	1755241	Pin	1	2-68	1755268	Chain catcher	1
2-16	1755216	Right handle comp.	1	2-42	1755242	Front guard	1	2-69	1755269	Spacer	1
2-17	1755217	Damper	2	2-43	1755243	Ring	1	2-70	1755270	Spring	1
2-18	1755218	Cap	2	2-44	1755244	Plate	1	2-71	1755271	Front handle	2
2-19	1755219	Gasket(fuel)	1	2-45	1755245	Ring	2	2-72	1755272	Bar	2
2-20	1755220	Tank cap(fuel)	1	2-46	1755246	Nut M8	2	2-73	1755273	Chain	1
2-21	1755221	Breather comp.	1	2-47	1755247	Nut	1	2-74	1755274	Chain cover	1
2-22	1755222	Vacuum pipe	1	2-48	1755248	Tension screw	1	2-75	1755275	Blow box	1
2-23	1755223	Snap ring	1	2-49	1755249	Tension gear	1	2-76	1755276	Starter assy	1
2-24	1755224	Vacuum joint	1	2-50	1755250	Cover	1	2-77	1755277	Fuel tank cover assy	3
2-25	1755225	Grommet(breather)	1	2-51	1755251	Screw ST4.2x10	3	2-78	1755278	Rear handle assy	1
2-26	1755226	Grip cover	1	2-52	1755252	Spacer	1	2-79	1755279	Clutch cover assy	1
				2-53	1755253	Spring	1	2-80	1755280	Upper cover assy	1